

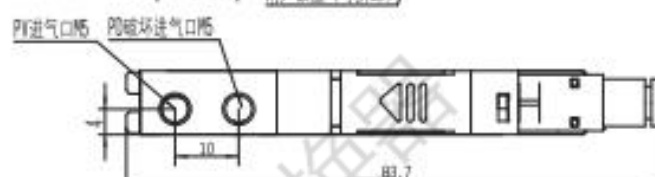
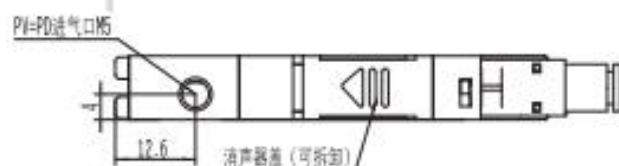


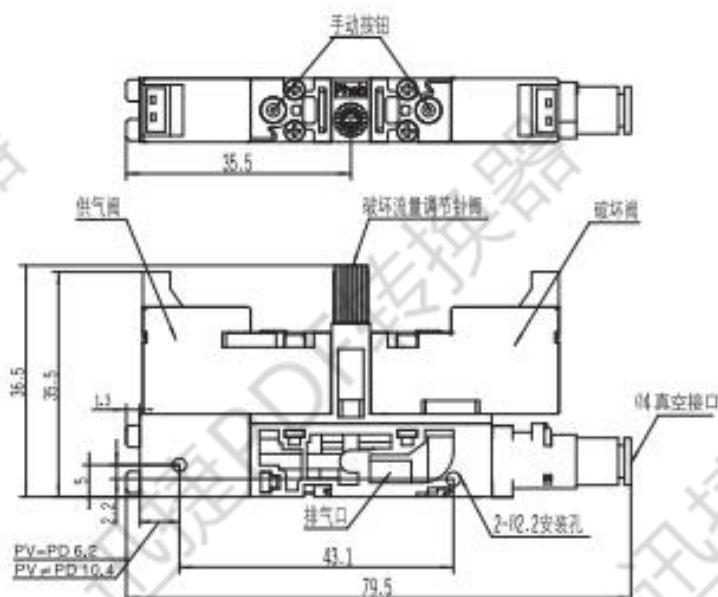

外形尺寸图/单体规格



 

HPZB□□ $\frac{1}{2}$ -K1□□-□

真空发生器/消声器排气、带供给阀/破坏阀
无真空压力开关

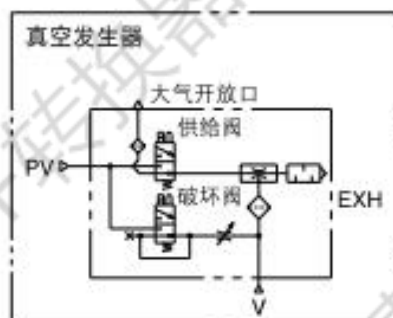

HPZB□11-J1□L-□

真空发生器/消声器排气、仅供给阀
无真空压力开关

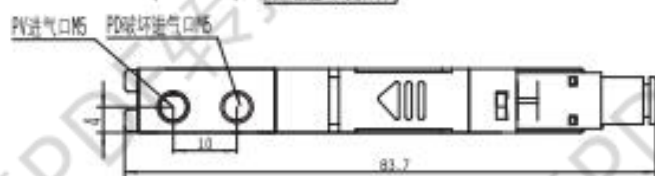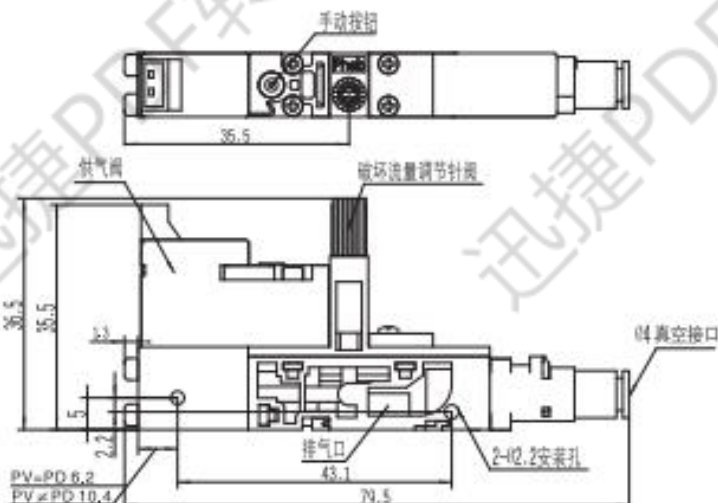

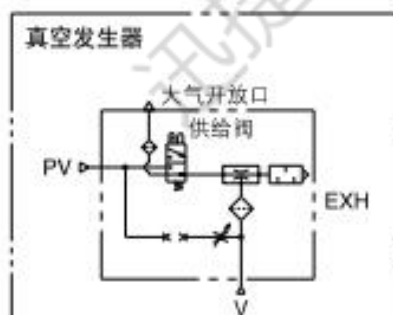




外形尺寸图/单体规格


HPZB□ $\frac{1}{2}$ -K1□□-□□□□

真空发生器/消声器排气、带供给阀/破坏阀
带真空压力开关

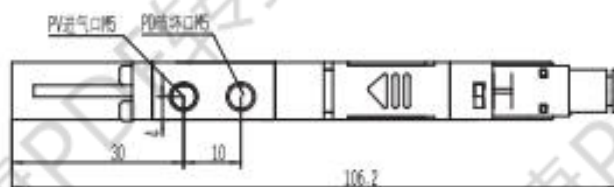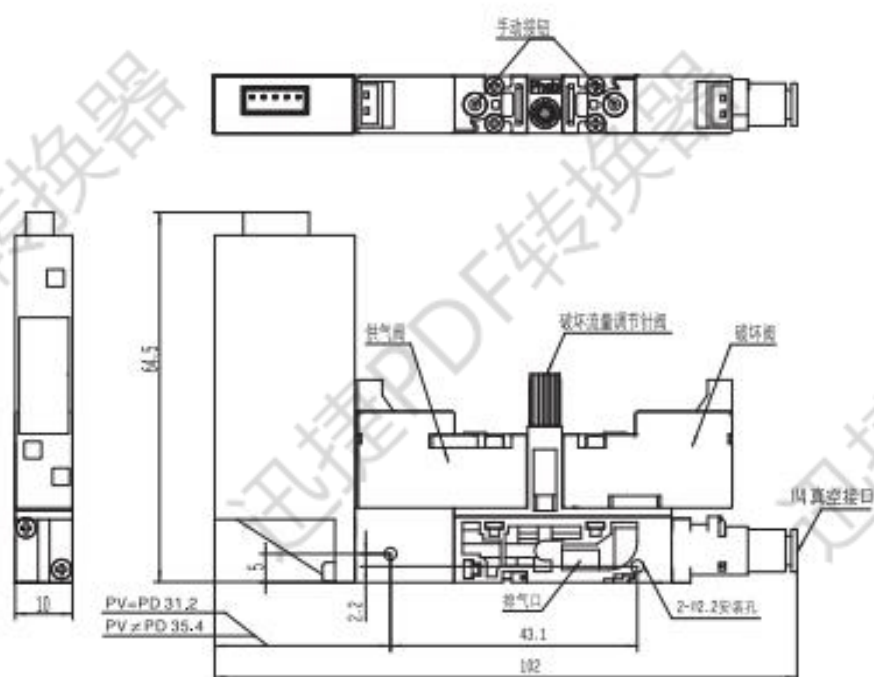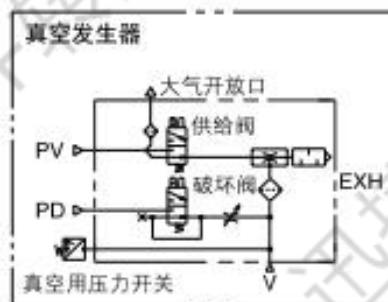

单独排气通口规格的共同尺寸

HPZB□ $\frac{1}{2}$ -□

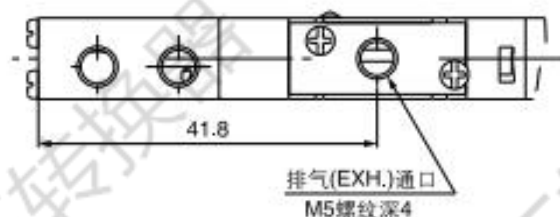



外形尺寸图/集装式规格


ZZB□-□□

* HPZB□31-K1□L-□

真空发生器

消声器排气, 带供给阀 / 破坏阀


无真空压力开关

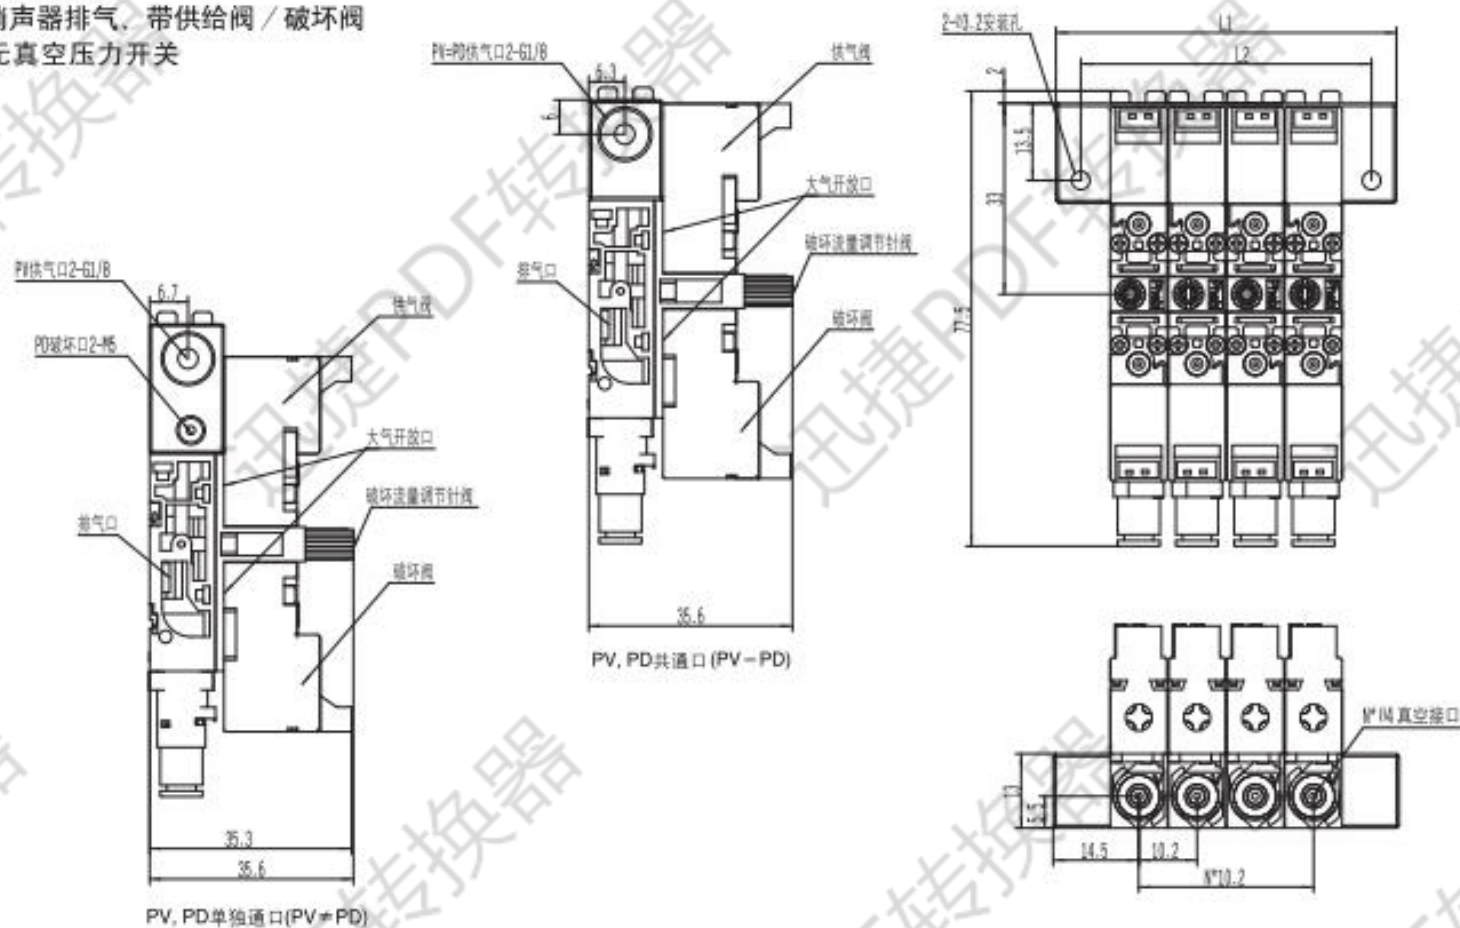

真空发生器/集装式


ZZB□□-□□

* HPZB□31-K1□□-□

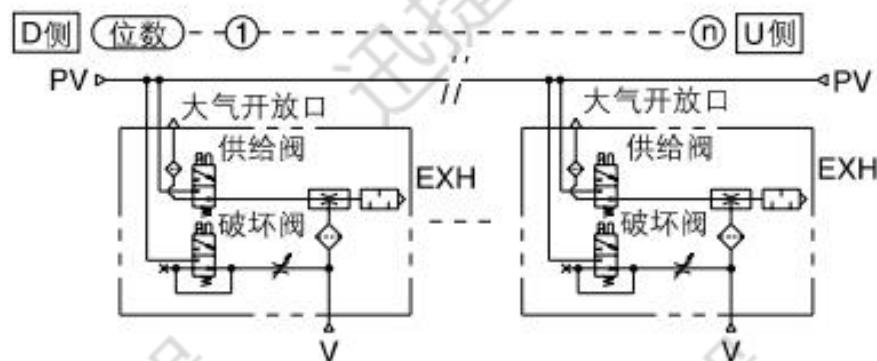

(mm)


L	1	2	3	4	5	6	7	8	9	10	11	12
L1	29	39.2	49.4	59.6	69.8	80	90.2	100.4	110.6	120.8	131	141.2
L2	21.6	31.8	42	52.2	62.4	72.6	82.8	93	103.2	113.4	123.6	133.8

 

* HPZB□31-K1□L-□□-□

帶真空用压力开关


PV, PD单独通口($PV \neq PD$)

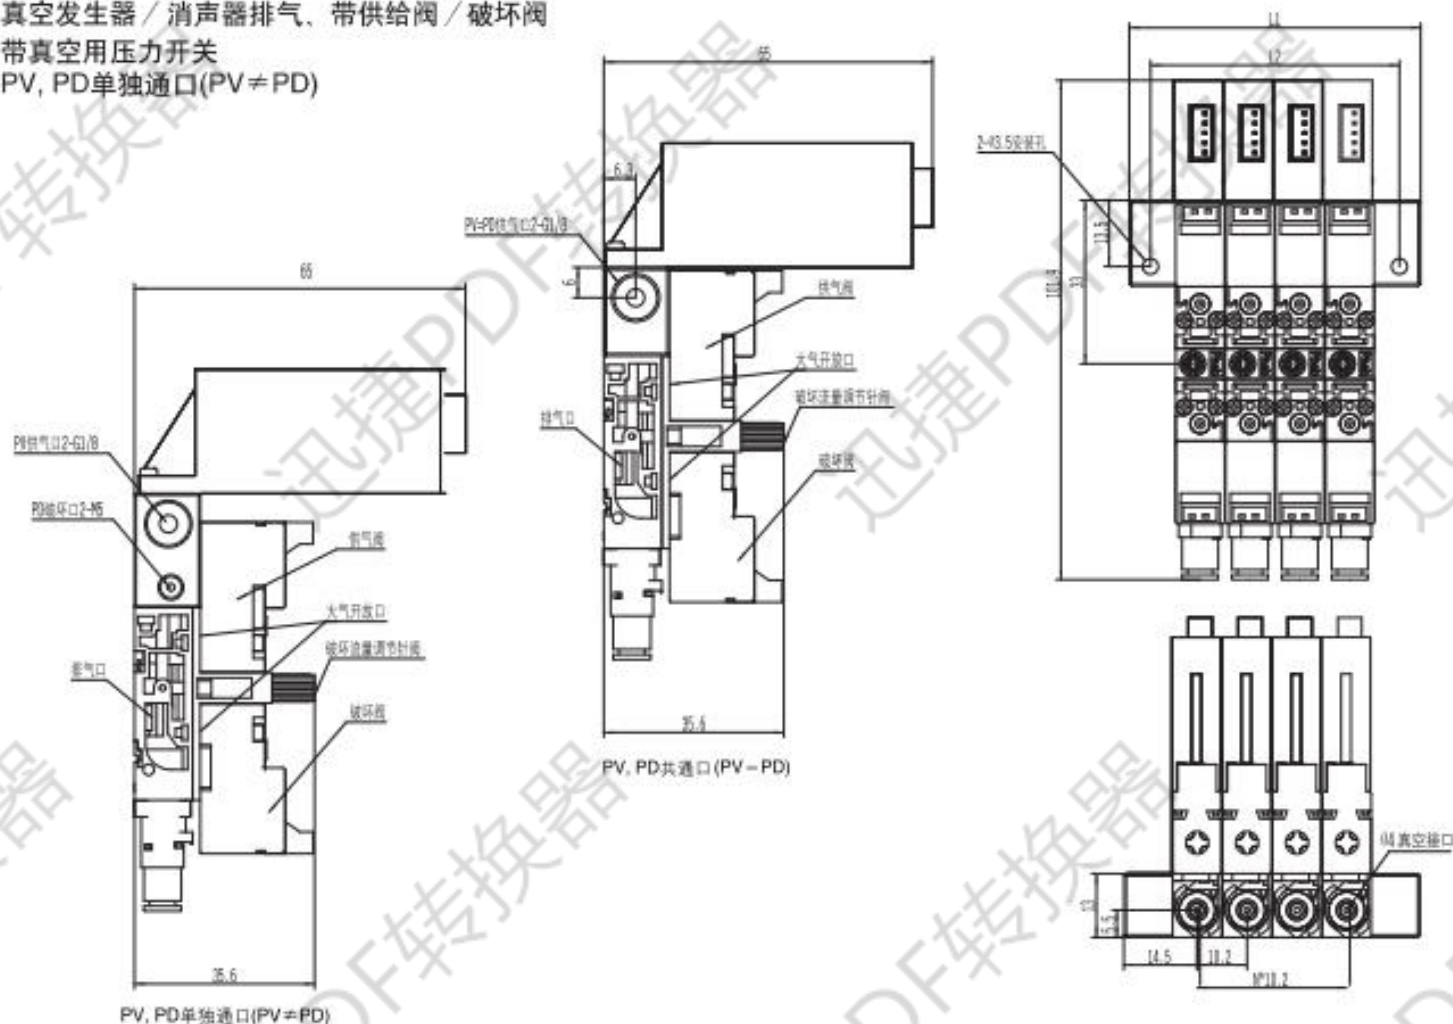

ZZB□-□□

* HPZB □:

* HPZB□31-K1□L-□□-□

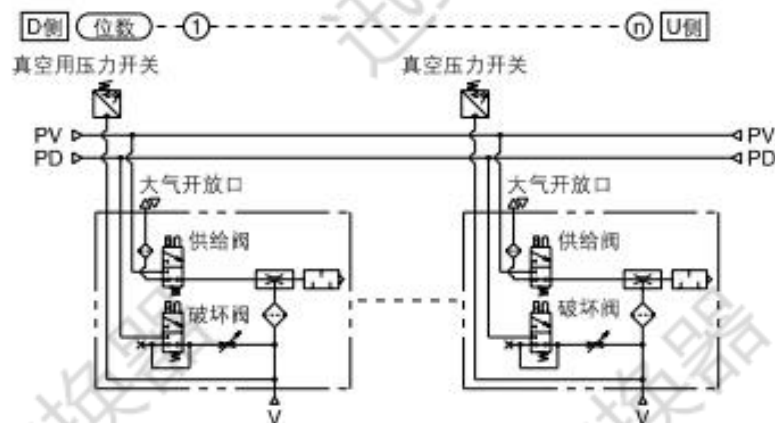

(mm)

$L \backslash n$	1	2	3	4	5	6	7	8	9	10	11	12
L1	29	39.2	49.4	59.6	69.8	80	90.2	100.4	110.6	120.8	131	141.2
L2	21.6	31.8	42	52.2	62.4	72.6	82.8	93	103.2	113.4	123.6	133.8




单体用托架安装尺寸

单体用托架型号: **ZB1-BK1-A**

※附带安装螺钉(M2×14, 带垫圈)2只, M2螺母2个

右侧面外侧安装

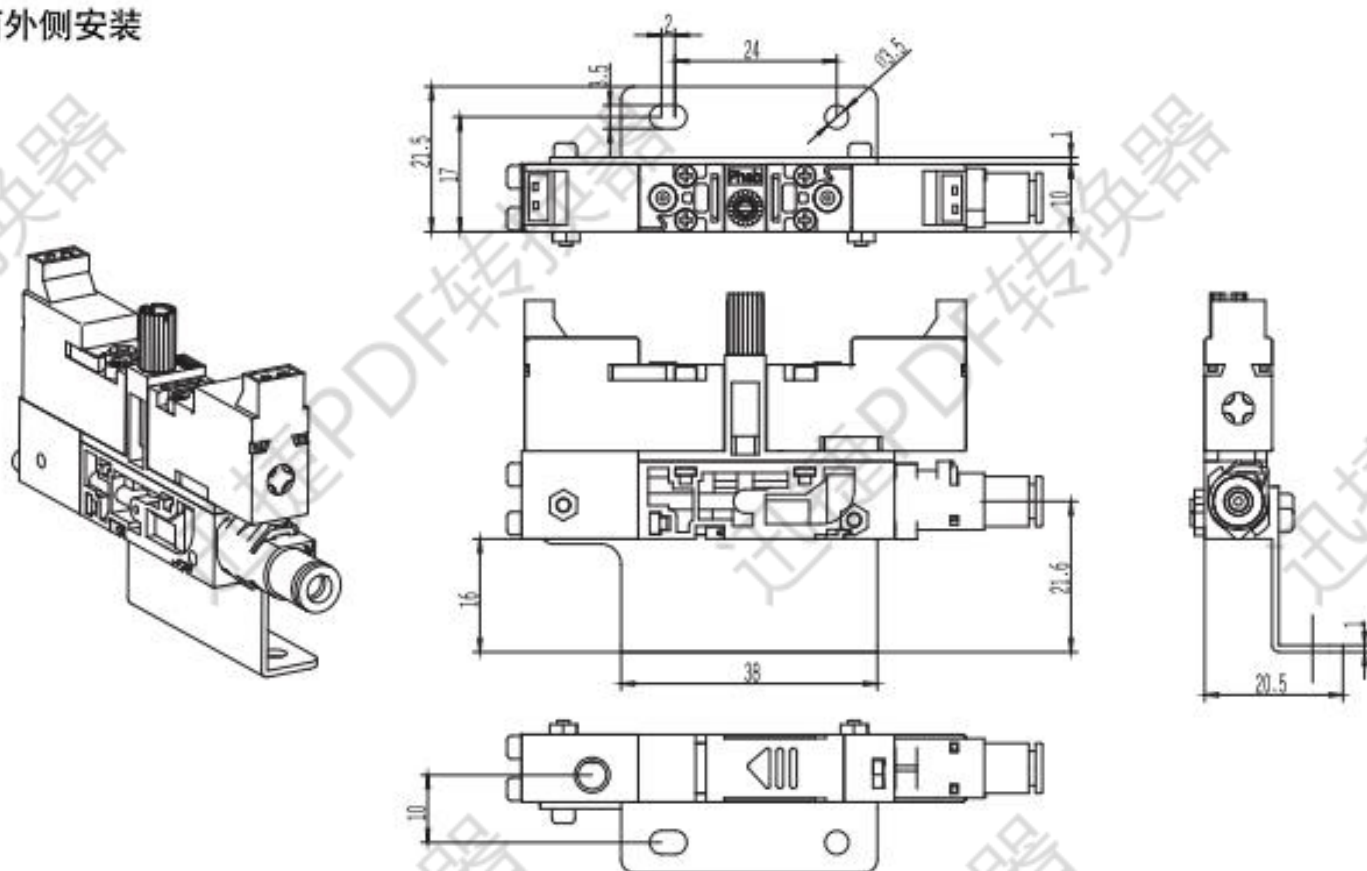

左侧面内侧安装

